


Last Modified: 9-13-2007		1.6 A
Service Category: Brake	Section: Brake Control/Dynamic Control System	
Model Year: 2008	Model: FJ Cruiser	Doc ID: RM000002559001X
Title: BRAKE CONTROL: REAR SPEED SENSOR: REMOVAL (2008 FJ Cruiser)		

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE REAR WHEEL
3. REMOVE REAR SPEED SENSOR

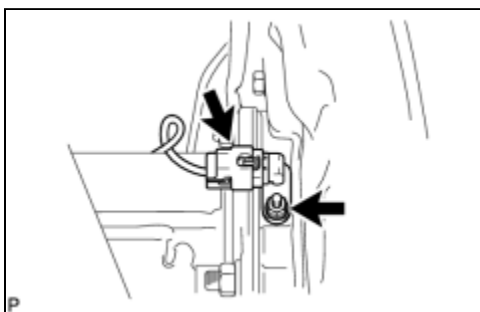

- (a) Disconnect the skid control sensor wire.
- (b) Remove the nut and rear speed sensor.

NOTICE:

- Do not attach any foreign matter to the sensor tip.
- Ensure that no foreign matter enters the sensor installation part.

