




Audio System

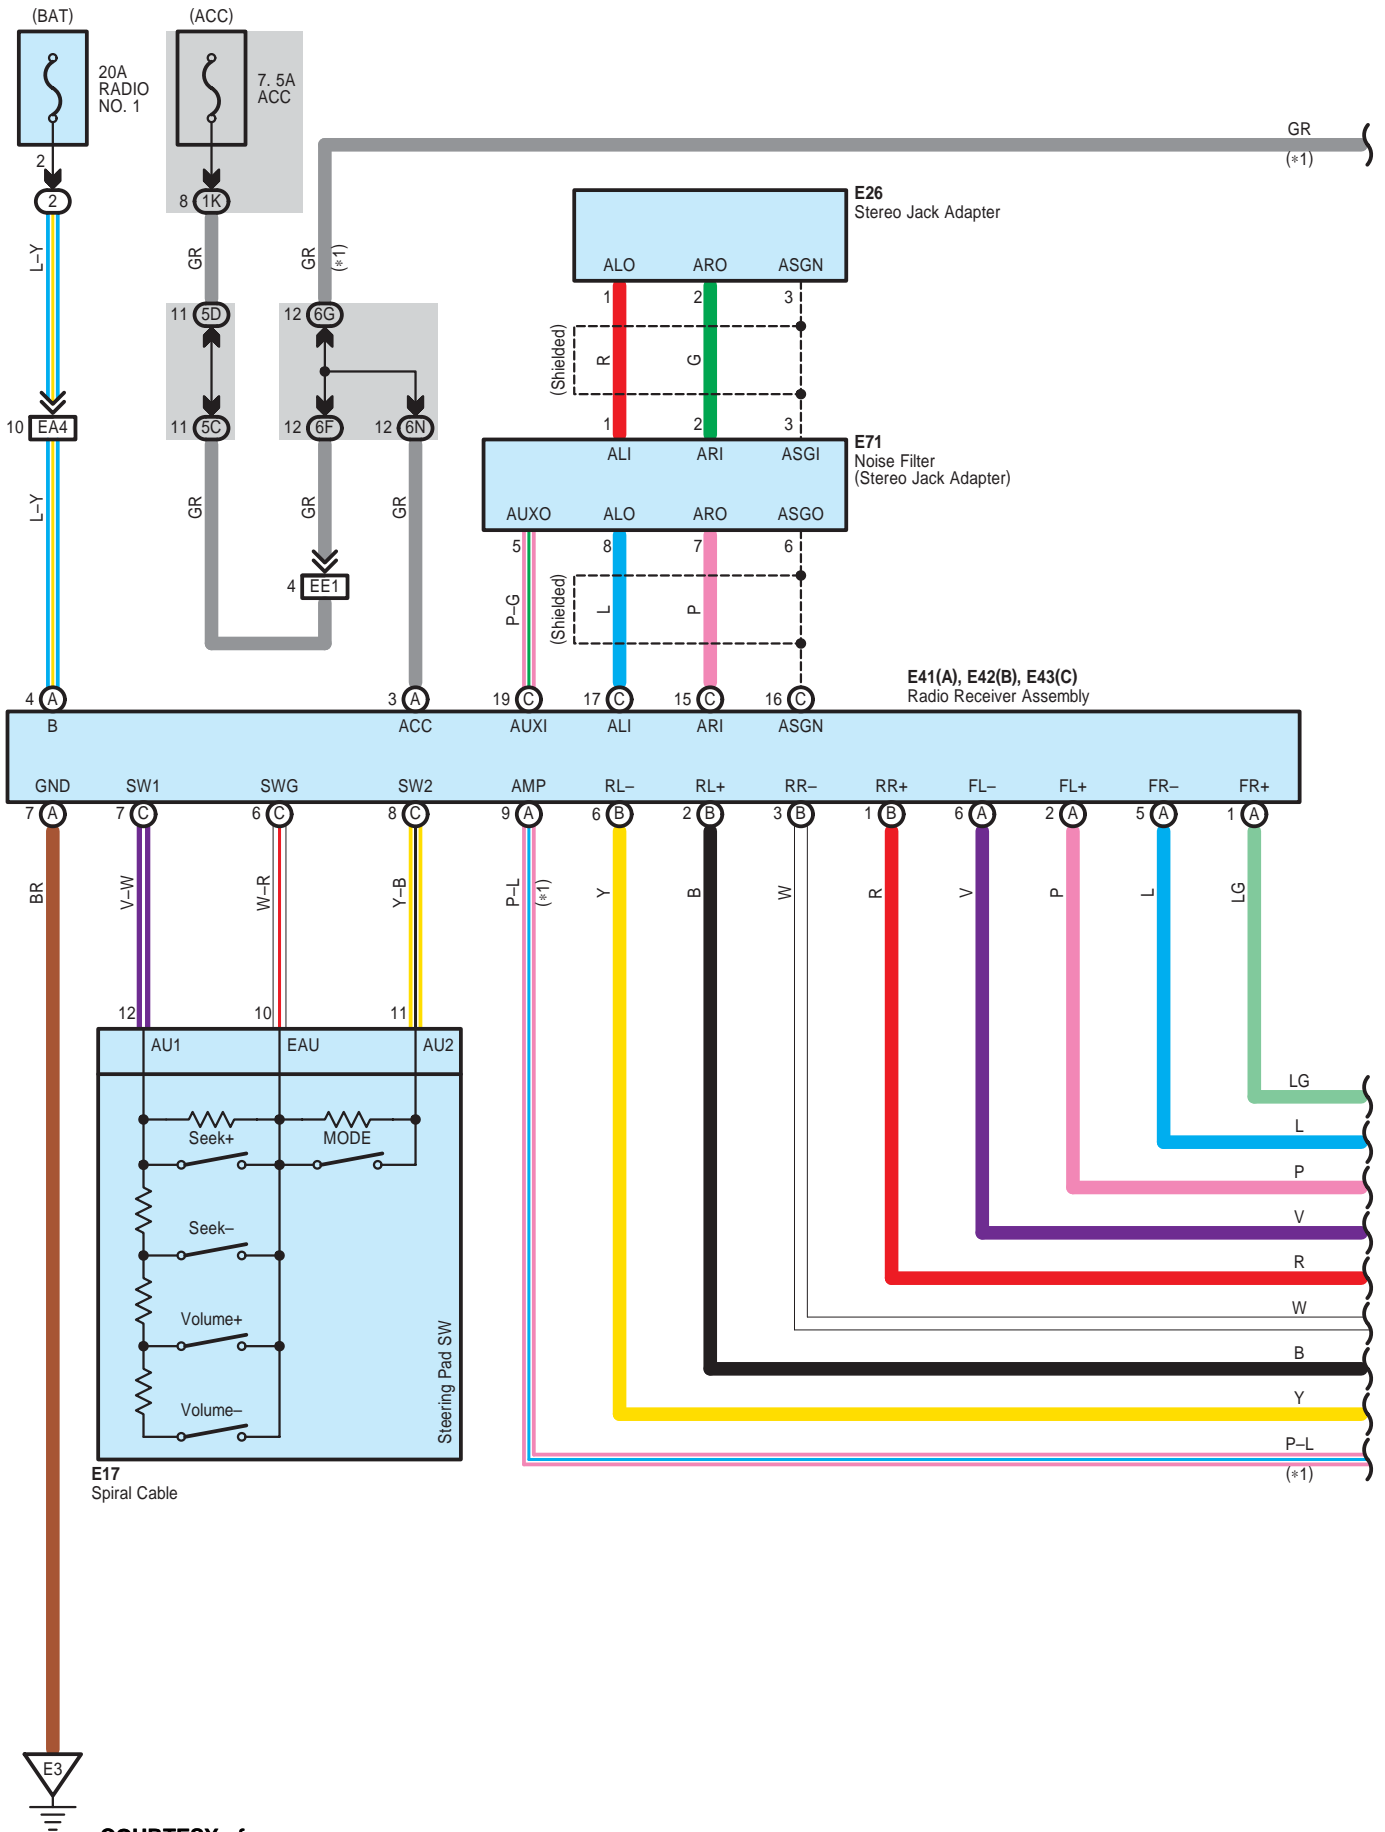


* 1 : w/ Woofer

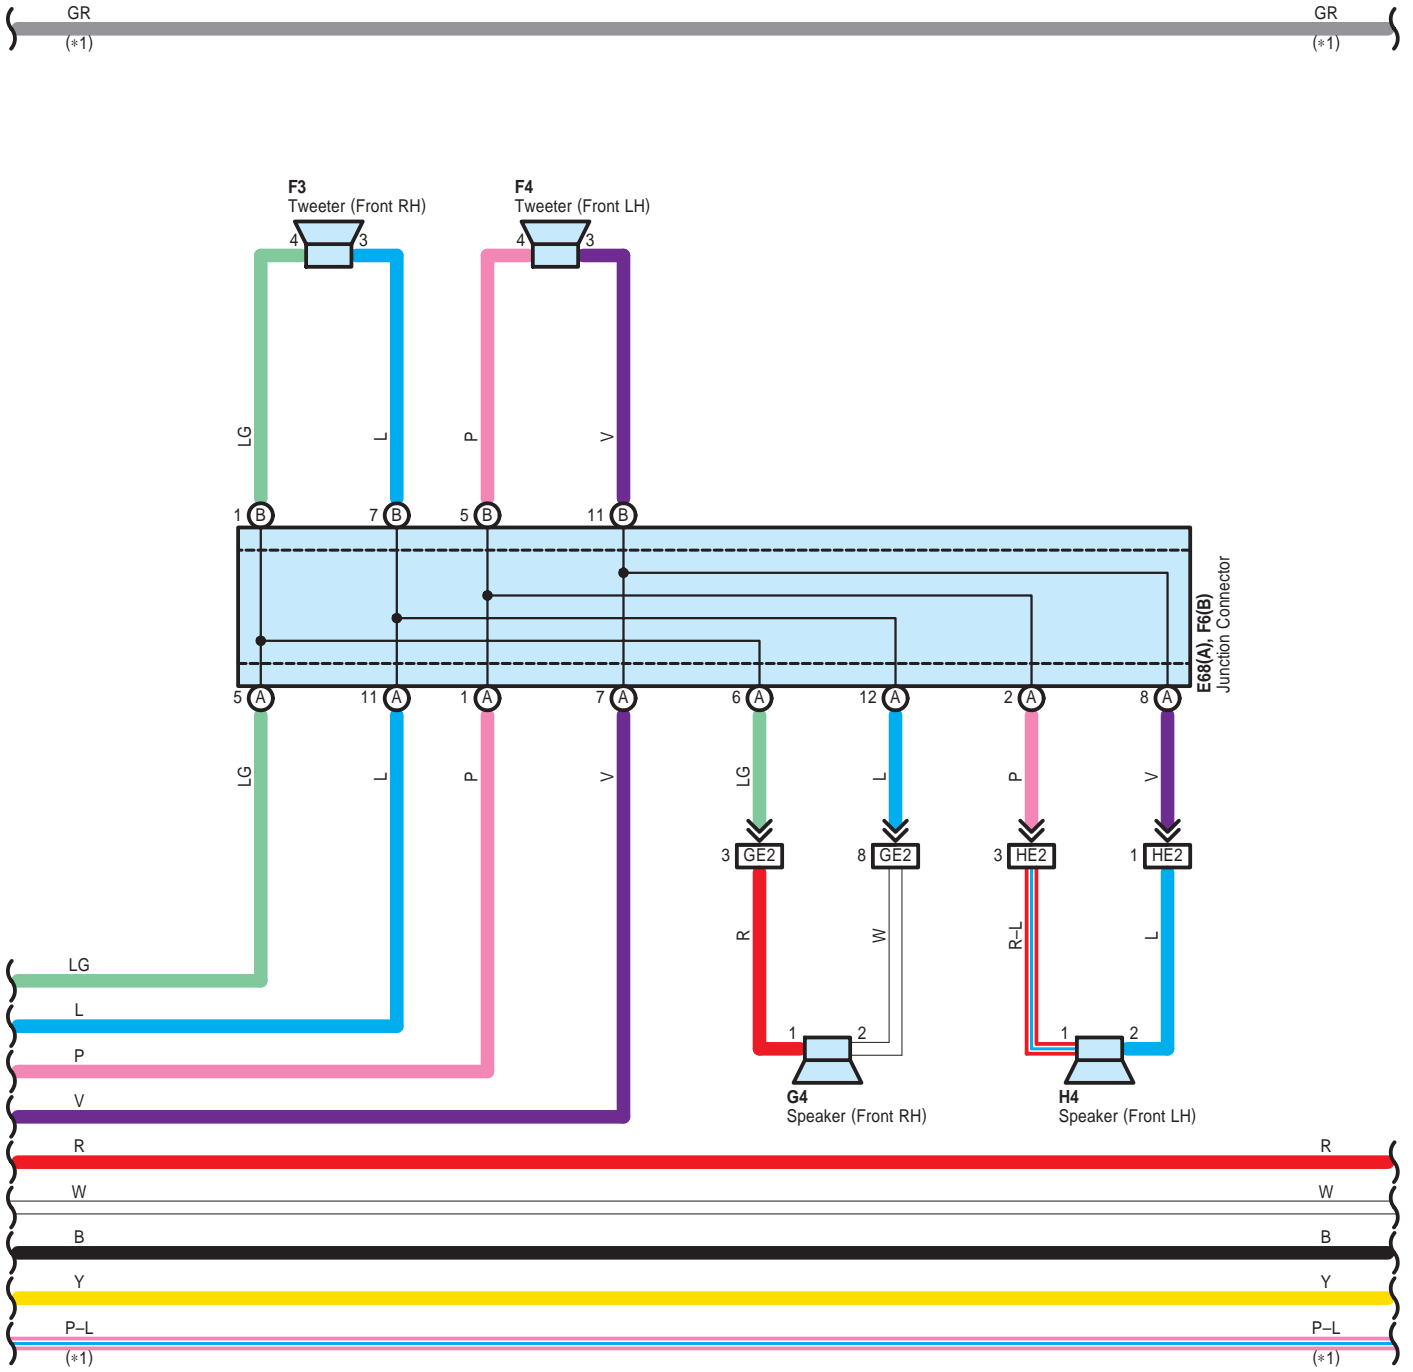

Audio System

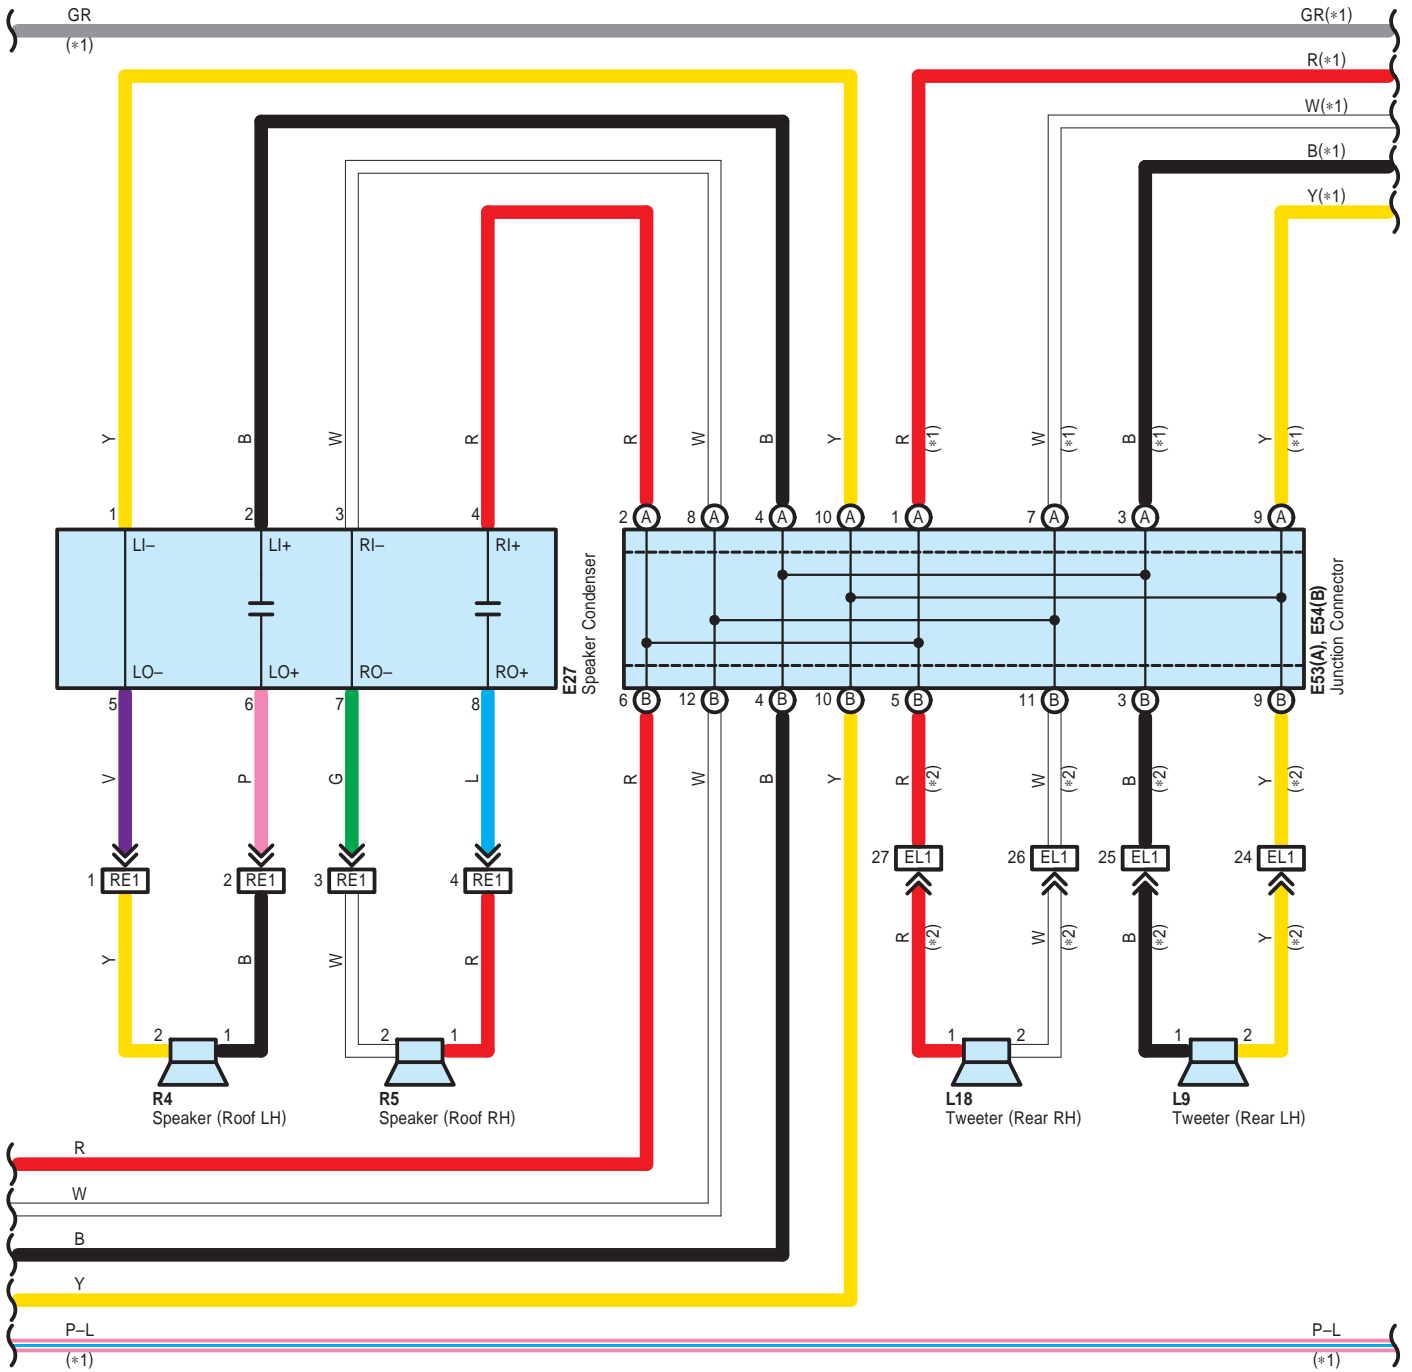

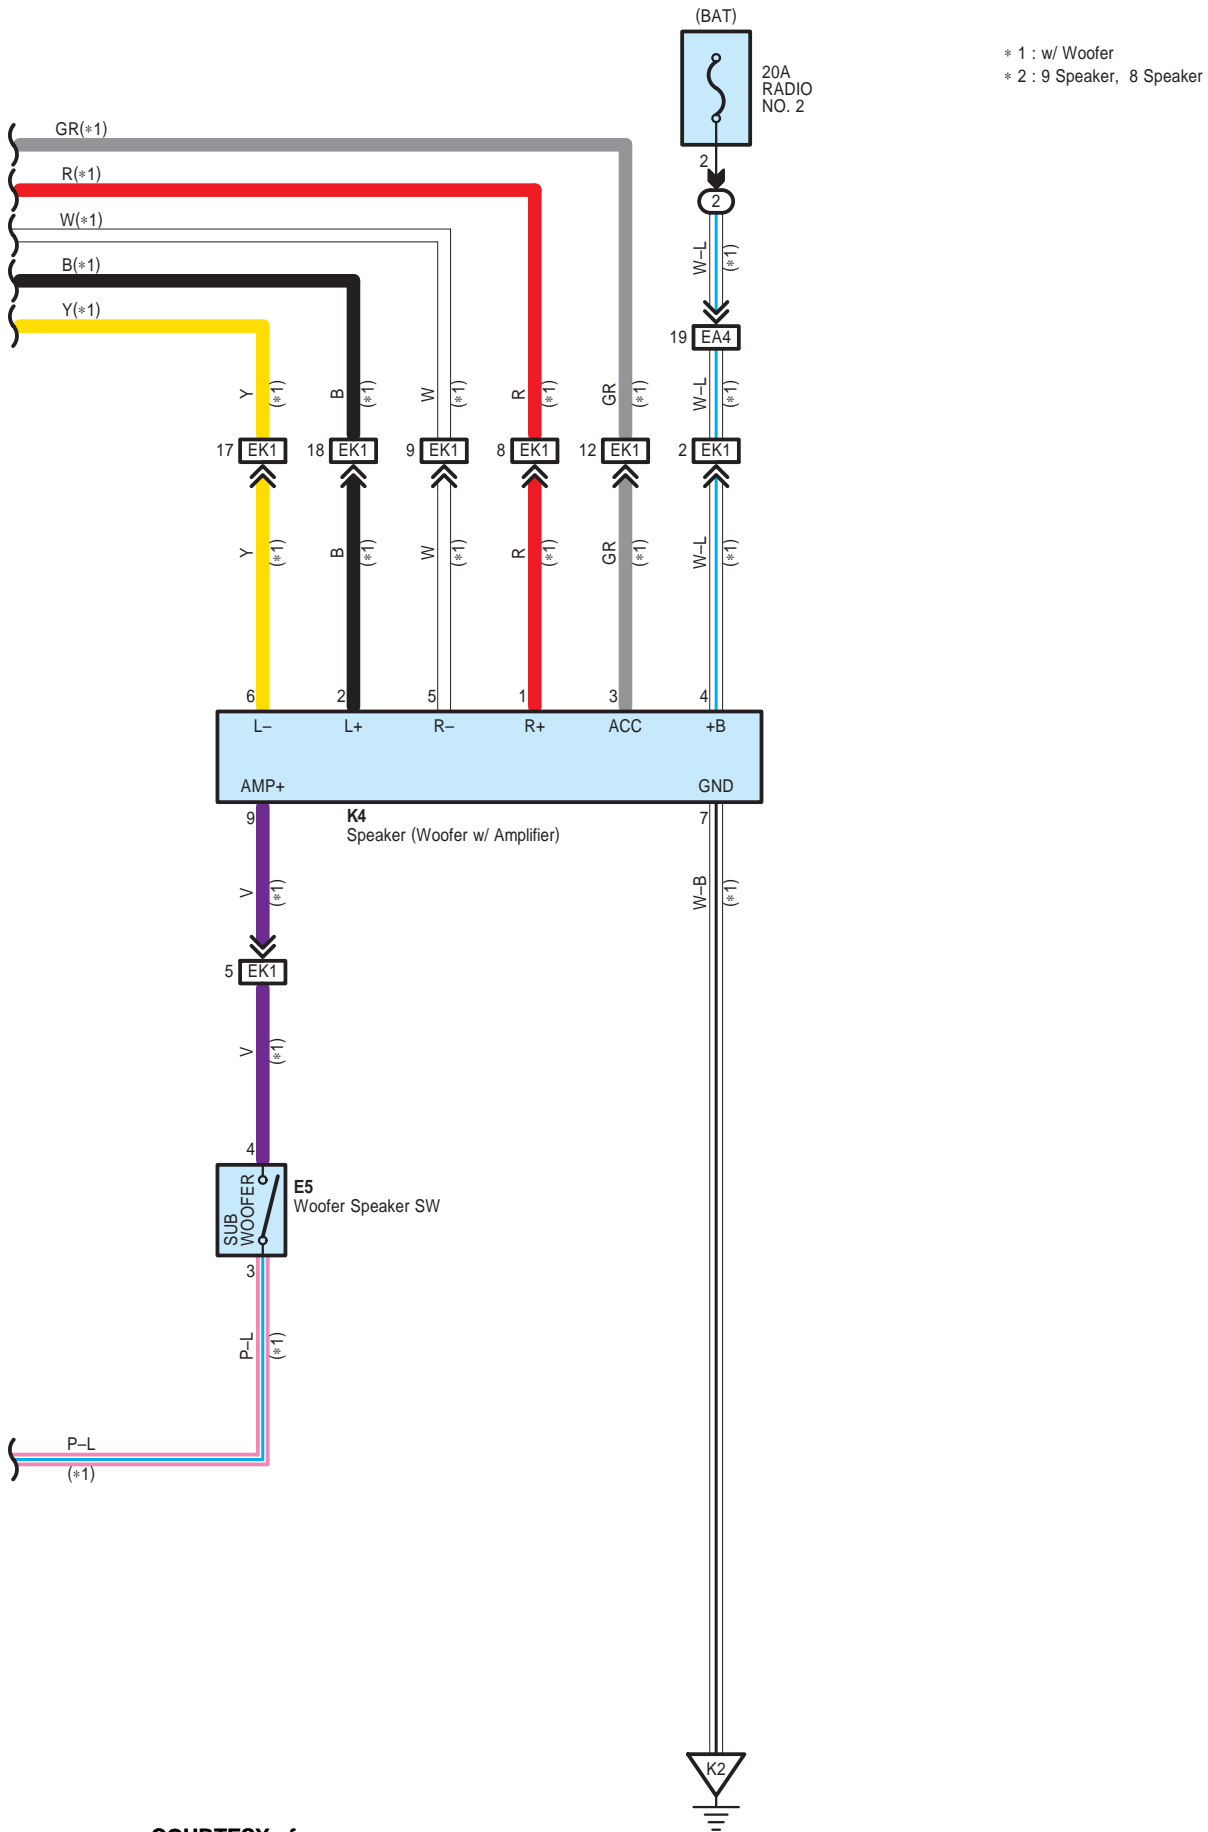

Audio System

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
E5		42	E53	A	44	G4		47
E17		42	E54	B	44	H4		47
E26		43	E68	A	44	K4		46
E27		43	E71		44	L9		46
E41	A	43	F3		45	L18		46
E42	B	43	F4		45	R4		47
E43	C	43	F6	B	45	R5		47

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B No.2 (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1K	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
5C	28	Instrument Panel Wire and Center J/B LH (Instrument Panel LH)
5D		
6F	32	Instrument Panel Wire and Center J/B RH (Instrument Panel RH)
6G		
6N		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA4	51	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
EE1	51	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel RH)
EK1	51	Instrument Panel Wire and Floor Wire (Right Kick Panel)
EL1	51	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
GE2	51	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
HE2	51	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
RE1	51	Roof Wire and Instrument Panel Wire (Left Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
E3	51	Instrument Panel Brace RH
K2	52	Rear Wheel House RH

