
BRAKE SYSTEM


PRECAUTION

1. Necessary care must be taken to replace each part properly as it could affect the brake system performance. This could cause driving hazards. Replace each part with an identical part with the same number.
2. It is very important to keep parts and the area clean when repairing the brake system.
3. If the vehicle is equipped with a mobile communication system, refer to the precautions in the INTRODUCTION section.

BR

SYSTEM DIAGRAM

BR

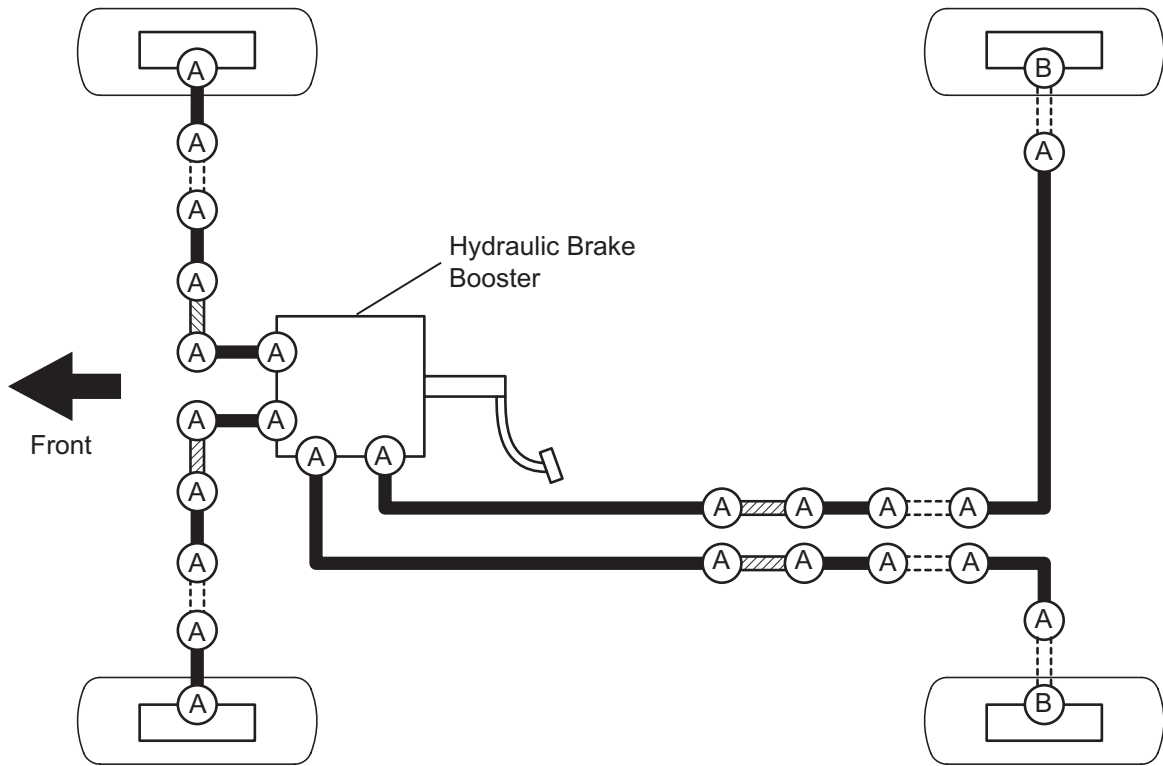

— : Brake Tube

- - - - : Flexible Hose

▨ : Brake Tube Way

Ⓐ : for use without SST:

Union Nut Torque: 15 N*m (155 kgf*cm, 11 ft*lbf)

for use with SST:

Union Nut Torque: 14 N*m (143 kgf*cm, 10 ft*lbf)

Ⓑ : Torque: 31 N*m (316 kgf*cm, 23 ft*lbf)