


Last Modified: 6-4-2008	5.1 A	From: 200601
Model Year: 2007	Model: FJ Cruiser	Doc ID: RM000001711001X
Title: BRAKE: FRONT BRAKE: DISASSEMBLY (2007 FJ Cruiser)		


DISASSEMBLY

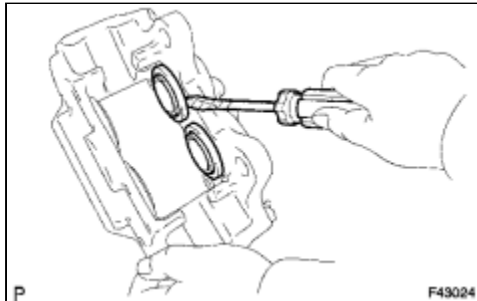


1. REMOVE CYLINDER BOOT

- (a) Using a screwdriver, remove the 4 set rings and 4 cylinder boots from the disc brake cylinder.

2. REMOVE FRONT DISC BRAKE PISTON

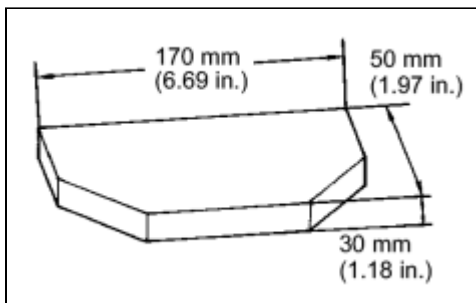

- (a) Prepare a wooden plate to hold the pistons.

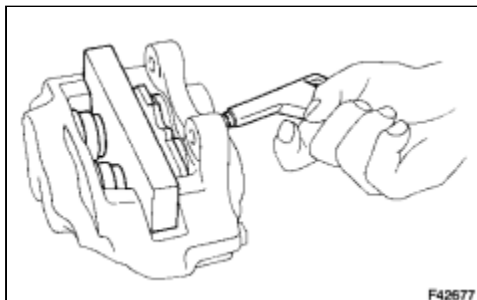

- (b) Place the plate between the pistons and insert a pad into one side.

- (c) Apply compressed air to remove the pistons one side at a time from the disc brake cylinder.

Do not place your fingers in front of the piston when applying compressed air.

Do not spatter the brake fluid.

3. REMOVE PISTON SEAL



(a) Using a screwdriver, remove the 4 piston seals from the cylinder.

Do not damage the inner surface or piston seal groove of the cylinder.

4. REMOVE FRONT DISC BRAKE BLEEDER PLUG CAP

5. REMOVE FRONT DISC BRAKE BLEEDER PLUG

