


Last Modified: 6-4-2008	5.1 A	From: 200601
Model Year: 2007	Model: FJ Cruiser	Doc ID: RM00000171H001X
Title: BRAKE: FRONT BRAKE: REMOVAL (2007 FJ Cruiser)		

REMOVAL

1. REMOVE FRONT WHEEL

2. DRAIN BRAKE FLUID

Immediately wash off any brake fluid that comes into contact with any painted surfaces.

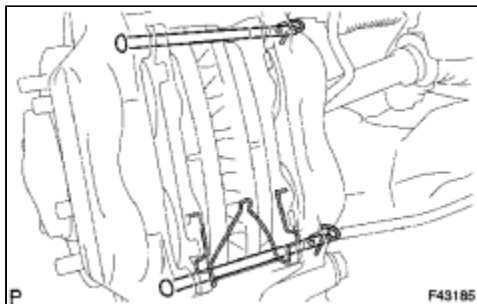

3. REMOVE FRONT DISC BRAKE ANTI RATTLE WITH HOLE PIN

- Remove the 2 pin hold clips, then remove the 2 hole pins from the disc brake cylinder.
- Remove the anti rattle spring from the disc brake pad.


4. REMOVE FRONT DISC BRAKE PAD

- Remove the 2 disc brake pads with anti squeal shims from the disc brake cylinder.

5. REMOVE FRONT ANTI SQUEAL SHIM KIT

- Remove the No. 1 and No. 2 anti squeal shims from each of the disc brake pads.


6. REMOVE DISC BRAKE CYLINDER ASSEMBLY

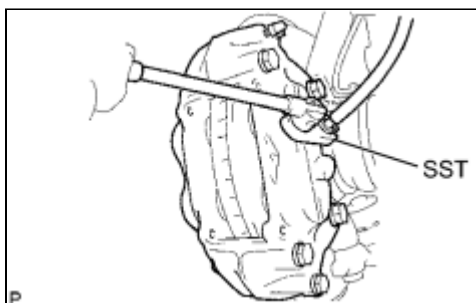

- Using SST, separate the brake tube from the disc brake cylinder.

SST: 09023-00101

Use a container to collect the brake fluid as it drains out.

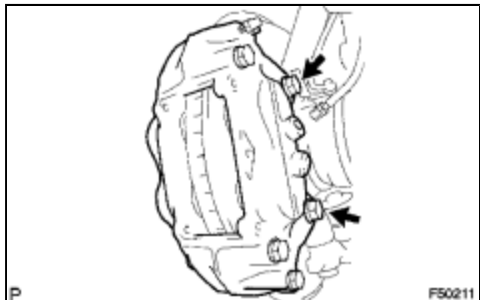

(b) Remove the 2 bolts and disc brake cylinder.

7. REMOVE FRONT DISC

(a) Place matchmarks on the disc and the axle hub and remove the disc.

