



<b>Last Modified:</b> 6-4-2008	5.1 A	<b>From:</b> 200601
<b>Model Year:</b> 2007	<b>Model:</b> FJ Cruiser	<b>Doc ID:</b> RM000000ORP006X
<b>Title:</b> BRAKE: REAR BRAKE: DISASSEMBLY (2007 FJ Cruiser)		

## DISASSEMBLY

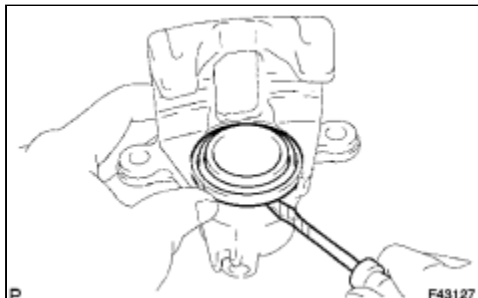

### 1. REMOVE CYLINDER BOOT

- (a) Using a screwdriver, remove the cylinder boot from the disc brake cylinder.

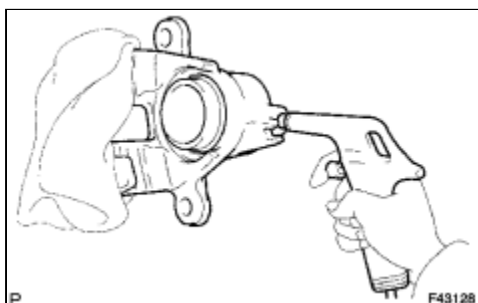


### 2. REMOVE REAR DISC BRAKE PISTON

- (a) Place a shop rag or piece of cloth between the piston and disc brake cylinder.
- (b) Apply compressed air to remove the piston from the disc brake cylinder.

**Do not place your fingers in front of the piston when applying compressed air.**

**Do not spatter the brake fluid.**

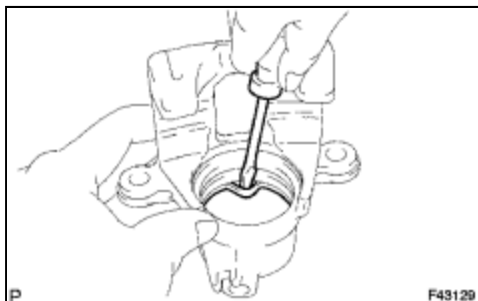

### 3. REMOVE PISTON SEAL

- (a) Using a screwdriver, remove the piston seal from the disc brake cylinder.

**Do not damage the inner surface or piston seal groove of the cylinder.**

### 4. REMOVE REAR DISC BRAKE BLEEDER PLUG CAP

### 5. REMOVE REAR DISC BRAKE BLEEDER PLUG

