


<b>Last Modified:</b> 6-4-2008	5.1 A	<b>From:</b> 200601
<b>Model Year:</b> 2007	<b>Model:</b> FJ Cruiser	<b>Doc ID:</b> RM000000P9Q006X
<b>Title:</b> BRAKE: REAR BRAKE: REMOVAL (2007 FJ Cruiser)		

## REMOVAL

### 1. REMOVE REAR WHEEL

### 2. DRAIN BRAKE FLUID


Immediately wash off any brake fluid that comes into contact with any painted surfaces.

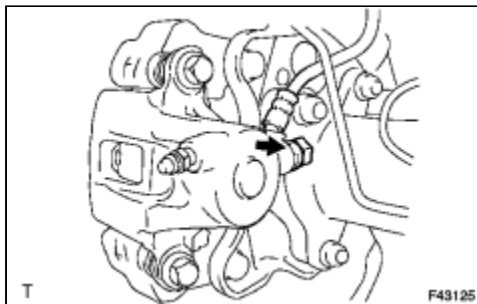

### 3. SEPARATE REAR FLEXIBLE HOSE

- (a) Remove the union bolt and gasket and separate the flexible hose from the disc brake cylinder.

Use a container to collect the brake fluid as it drains out.

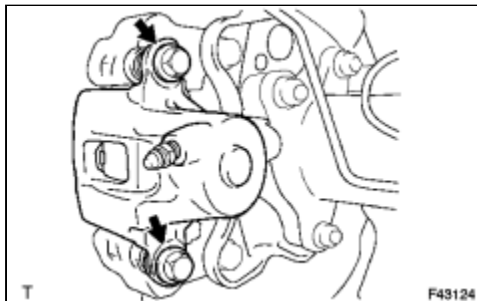

### 4. REMOVE REAR DISC BRAKE CYLINDER ASSEMBLY

- (a) Remove the 2 slide pins and remove the disc brake cylinder from the disc brake cylinder mounting.

### 5. REMOVE REAR DISC BRAKE PAD

- (a) Remove the 2 disc brake pads with anti squeal shim from the disc brake cylinder mounting.

### 6. REMOVE REAR DISC BRAKE ANTI SQUEAL SHIM


- (a) Remove the 2 anti squeal shims from each brake pad.

### 7. REMOVE REAR DISC BRAKE PAD WEAR INDICATOR PLATE

- (a) Remove the indicator plate from the inner side of the brake pad.

### 8. REMOVE REAR DISC BRAKE PAD SUPPORT PLATE

- (a) Remove the 4 pad support plates from the disc brake cylinder mounting.

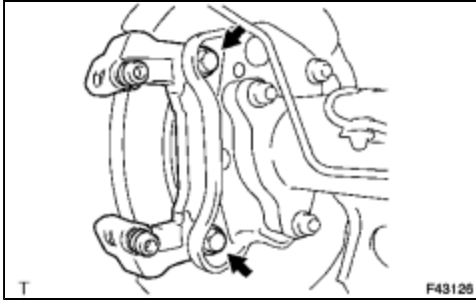

### 9. REMOVE REAR DISC BRAKE CYLINDER MOUNTING

- (a) Remove the 2 bolts and disc brake cylinder mounting.

### 10. REMOVE REAR DISC BRAKE CYLINDER SLIDE BUSH

- (a) Remove the slide bush from the disc brake cylinder mounting.

### 11. REMOVE REAR DISC BRAKE BUSH DUST BOOT

- (a) Remove the dust boot from the disc brake cylinder mounting.

### 12. REMOVE REAR DISC BRAKE CYLINDER HOLE PLUG

- (a) Remove the hole plug from the disc brake cylinder mounting.

### 13. REMOVE REAR DISC

- (a) Place matchmarks on the disc and axle hub and remove the disc.

