
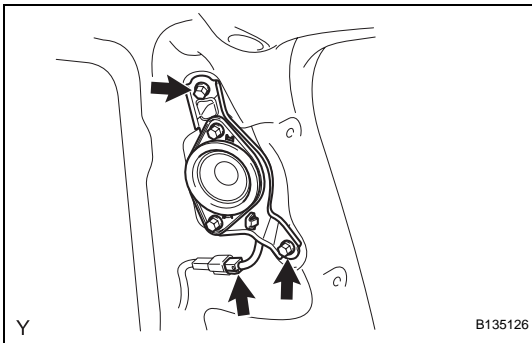


## INSTALLATION

### HINT:

The procedure described below is for the RH side. Use the same procedure for both the RH and LH sides, unless otherwise specified.

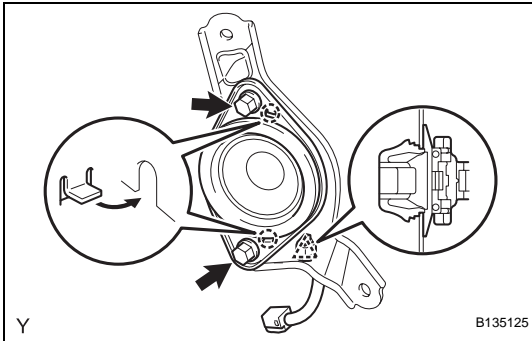

### 1. INSTALL REAR SPEAKER ASSEMBLY

- (a) Inert the 2 hooks into the 2 cutouts of the speaker mounting bracket and install the rear speaker with the 2 bolts.

**Torque: 8.1 N\*m (85 kgf\*cm, 72 in.\*lbf)**

- (b) Install the clamp.

### 2. INSTALL SPEAKER MOUNTING BRACKET

- (a) Install the speaker mounting bracket with the 2 bolts.

**Torque: 8.1 N\*m (85 kgf\*cm, 72 in.\*lbf)**

- (b) Connect the speaker connector.

### 3. INSTALL ROOF SIDE INNER GARNISH (See page [IR-38](#))

### 4. INSTALL DECK TRIM SIDE PANEL ASSEMBLY

- (a) for RH Side:

- (1) Install the deck trim side panel assembly (See page [IR-39](#)).

- (b) for LH Side:

- (1) Install the deck trim side panel assembly (See page [IR-39](#)).

### 5. INSTALL REAR DECK TRIM COVER (w/ Power Outlet Socket) (See page [IR-40](#))

### 6. INSTALL REAR SEAT OUTER BELT ASSEMBLY (See page [IR-40](#))

### 7. INSTALL LAP BELT OUTER ANCHOR COVER (See page [SB-61](#))

### 8. INSTALL AMPLIFIER BOX SPEAKER ASSEMBLY (w/ Woofer) (See page [AV-90](#))

### 9. INSTALL SPEAKER MOUNTING COVER (w/ Woofer) (See page [AV-91](#))

### 10. INSTALL DECK SIDE GARNISH (w/ Woofer) (See page [IR-41](#))

### 11. INSTALL QUARTER TRIM POCKET (w/o Woofer) (See page [IR-41](#))

### 12. INSTALL SIDE TRIM COVER (w/o Woofer) (See page [IR-42](#))

### 13. INSTALL QUARTER TRIM POCKET TRAY (w/o Woofer) (See page [IR-41](#))

14. **INSTALL PACKAGE HOLDER NET HOOK (w/o Woofer) (See page [SB-62](#))**
15. **INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP (See page [SB-62](#))**
16. **INSTALL ACCESS DOOR SCUFF PLATE (See page [IR-45](#))**
17. **INSTALL FRONT DOOR SCUFF PLATE (See page [IR-45](#))**
18. **INSTALL REAR FLOOR MAT ASSEMBLY (See page [IR-46](#))**
19. **INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY (See page [IR-46](#))**
20. **INSTALL REAR FLOOR MAT SUPPORT PLATE (See page [IR-46](#))**
21. **INSTALL REAR FLOOR BOARD (See page [IR-47](#))**
22. **INSTALL REAR SEATBACK ASSEMBLY**
  - (a) for RH Side:
    - (1) Install the rear seatback assembly (See page [SE-54](#)).
  - (b) for LH Side:
    - (1) Install the rear seatback assembly (See page [SE-38](#)).
23. **INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY**
  - (a) for RH Side:
    - (1) Install the rear seatback board carpet assembly (See page [SE-54](#)).
  - (b) for LH Side:
    - (1) Install the rear seatback board carpet assembly (See page [SE-38](#)).
24. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**