

Y

B135138E01

INSPECTION

1. INSPECT STEERING PAD SWITCH

(a) Check the resistance.

- (1) Using an ohmmeter, measure the resistance between the terminals.

Standard resistance

Tester Connection	Condition	Specified Condition
12 (AU1) - 10 (EAU)	All switches released	Approximately 100 kΩ
	SEEK+ switch: pushed in	2.5 Ω or less
	SEEK- switch: pushed in	Approximately 329 Ω
	VOL+ switch: pushed in	Approximately 1000 Ω
11 (AU2) - 10 (EAU)	All switches released	Approximately 100 kΩ
	MODE switch: push in	2.5 Ω or less

If the result is not as specified, replace the steering pad switch.

(b) Check the operation.

- (1) Apply battery voltage to the terminals and check that the indicator illuminates.

Standard


Condition	Standard
Positive battery - Terminal 1 (IL+2) Negative battery - Terminal 10 (EAU)	Illuminates

If the result is not as specified, replace the steering switch.

INSTALLATION

CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).

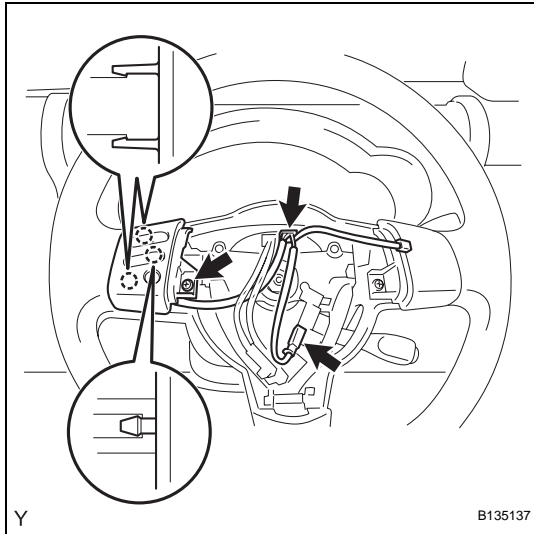

1. **INSTALL STEERING PAD SWITCH**
 - (a) Engage the 2 claws and the pin and install the steering pad.
 - (b) Tighten the screw.
Torque: 2.4 N*m (24 kgf*cm, 21 in.*lbf)
 - (c) Connect the connector.
 - (d) w/ Cruise Control System:
 - (1) Connect the cruise control switch connector.
2. **INSTALL STEERING PAD (See page [RS-346](#))**
3. **INSTALL STEERING WHEEL LOWER COVER LH (See page [RS-347](#))**
4. **INSTALL STEERING WHEEL LOWER COVER RH (See page [RS-347](#))**
5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
6. **INSPECT SRS WARNING LIGHT**
(See page [RS-29](#))