
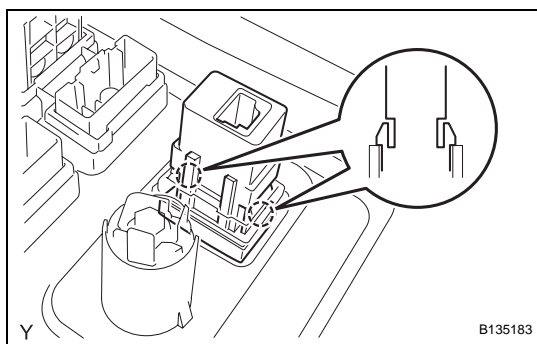


REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transmission) (See page [IP-11](#))
3. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for 4WD) (See page [IP-11](#))
4. REMOVE PARKING BRAKE HOLE COVER SUB-ASSEMBLY (See page [IP-11](#))
5. REMOVE FRONT CONSOLE BOX UPPER PANEL SUB-ASSEMBLY (See page [IP-12](#))
6. REMOVE FRONT CONSOLE BOX BOTTOM MAT (See page [IP-12](#))
7. REMOVE FRONT CONSOLE BOX (See page [IP-12](#))
8. REMOVE INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-13](#))
9. REMOVE STEREO JACK ADAPTER ASSEMBLY
 - (a) Disengage the 2 claws and remove the stereo jack adapter.

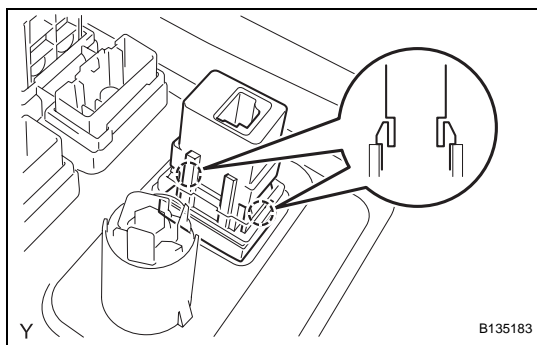

INSTALLATION

1. INSTALL STEREO JACK ADAPTER ASSEMBLY
 - (a) Engage the 2 claws and install the stereo jack adapter.
2. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-30](#))
3. INSTALL FRONT CONSOLE BOX (See page [IP-31](#))
4. INSTALL FRONT CONSOLE BOX BOTTOM MAT (See page [IP-31](#))
5. INSTALL FRONT CONSOLE BOX UPPER PANEL SUB-ASSEMBLY (See page [IP-31](#))
6. INSTALL PARKING BRAKE HOLE COVER SUB-ASSEMBLY (See page [IP-32](#))
7. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for 4WD) (See page [IP-32](#))
8. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transmission) (See page [IP-32](#))

AV

**9. CONNECT CABLE TO NEGATIVE BATTERY
TERMINAL**

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

AV